


## T-14 Brackets: SST-14B (Stainless) AT-14B (Aluminum)

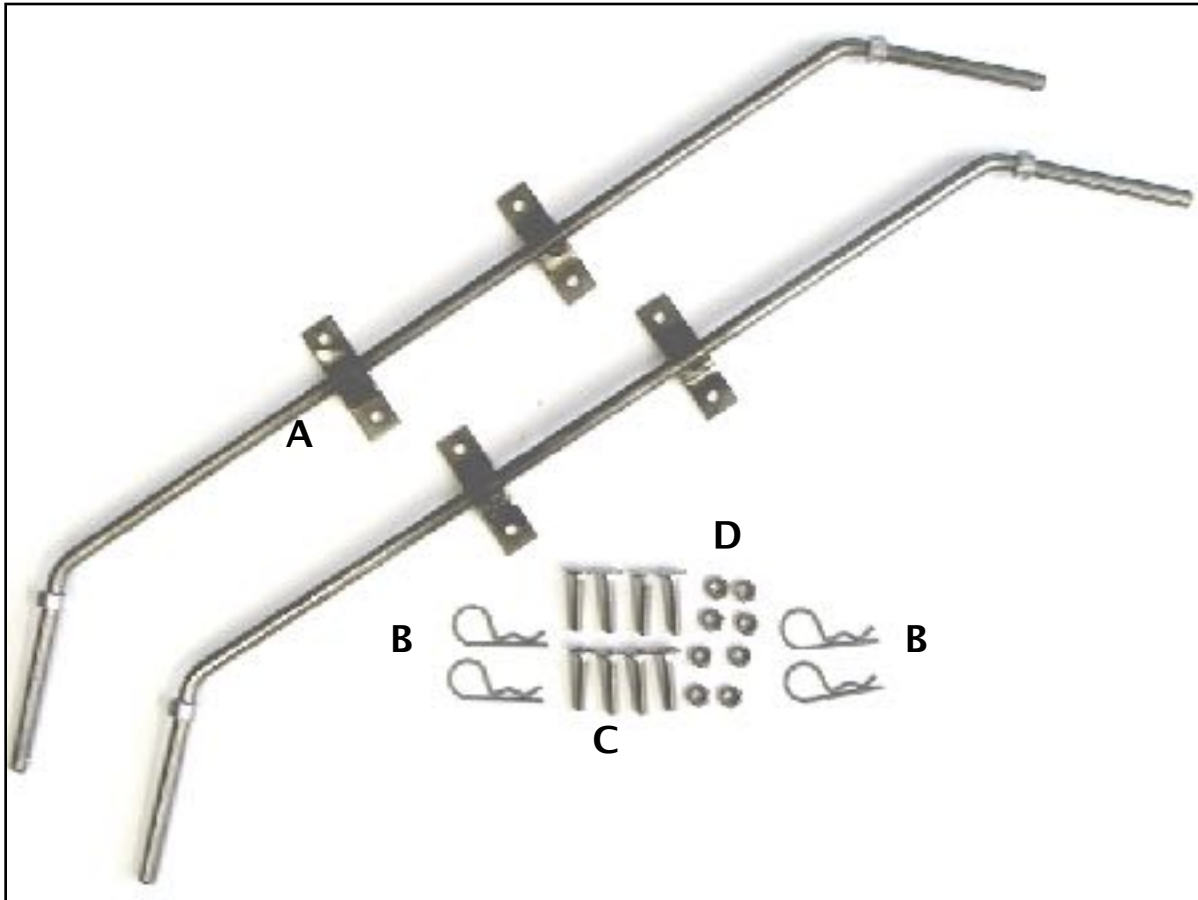

### Parts List

- A 2 Stainless gourd arms
- B 4 Stainless steel hitch pins
- C 8 stainless steel carriage bolts
- D 8 stainless finish nuts

Step 1) There are 2 ways to orient your bracket. The first is where the gourd arm is at a 45 degree to the house and will accommodate Troyer Horizontal gourds or flip the bracket around and the bracket will accommodate vertical hung gourds.

Step 2) Raise your T-14 house to a comfortable working height. Hold the Stainless steel bracket underneath the house. With a marker, mark the holes where the bracket and the underside of the T-14 meet.

Step 3) Drill the marked holes using a 1/4" drill bit.

Step 4) Hold bracket in place while you insert the bolt (D) from the inside of the T-14 into the house. Thread the (D) nut on and tighten.

Step 5) Repeat steps 1 thru 3 for the other bracket

Step 6) Slide the gourd thru the gourd arm till it hits the stop. Place your hitch pin (B) into the pre drilled hole in the gourd arm. This will keep your gourd in place.

T-14 House shown with a 2 Stainless Bracket and a set of the Aluminum Bracket with Gourd



**T-14 Brackets: SST-14B (Stainless) AT-14B (Aluminum)**



Stainless Brackets hung in this configuration will accommodate Troyer Horizontal Gourds



Stainless Brackets hung in this configuration will accommodate vertical gourds such as the SuperGourd and Excluder Gourd. You may need to enlarge your hanging hole to 3/8".

