


# EZ OFF Pole Guard (BRACKET) for 2" or 3" Poles

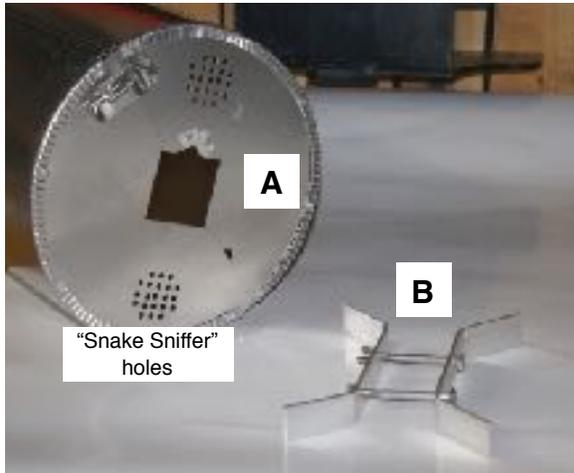

## EZ Off Parts:

- A - Bracket with attached hardware**
- B - Aluminum Tube**

## How to Mount your EZ OFF.

Your EZ Off is designed to be mounted above your rope winder. Guards should be placed no lower than 48" from the ground up whether using rope or cable.




**NOTE:** For rope users: rope winders will need to be reversed to fit inside the guard. Begin by removing the rope winder from your pole. If need be have a helper stand back holding the rope to keep your hub up, or place a C clamp under the hub to hold it up. Reverse the winder so that the winder is facing into the pole as seen in the photo. Replace rope winder on your pole, make sure the winder is level to the pole. Wrap your rope back onto the winder.

When winding the rope onto the rope winder make a loop to the left, then figure eight the rope onto the rope winder. This will keep the rope at

the center of the pole and fit nicely into the notch on the EZ OFF.


**Step 1)** Measure and mark your pole at or around 56" from the ground up. Use a square and a pencil and mark the pole. You will attach the pre assembled bracket at your pencil mark. Remove the wing nut from the bolt and slide the bracket around the pole so that your bracket is parallel to the rope winder or winch. Make sure your bracket is level (use your pencil mark), and that the rope falls in front of the bracket, tighten

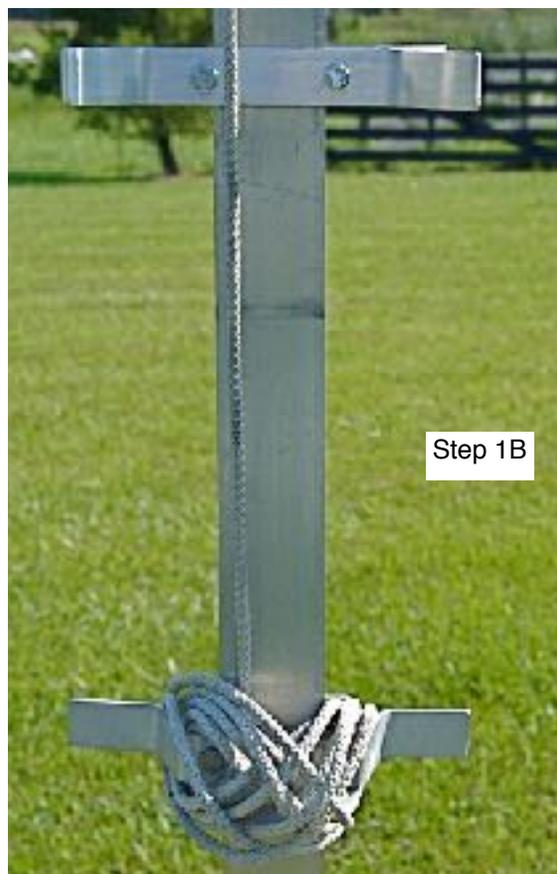

# EZ OFF Pole Guard (BRACKET) for 2" or 3" Poles

the nylon lock nut using a wrench and finger tighten the wing nut. Do not over tighten!

**Step 2)** Open the EZ OFF tube. Begin by opening the latch at the top of your pole, then

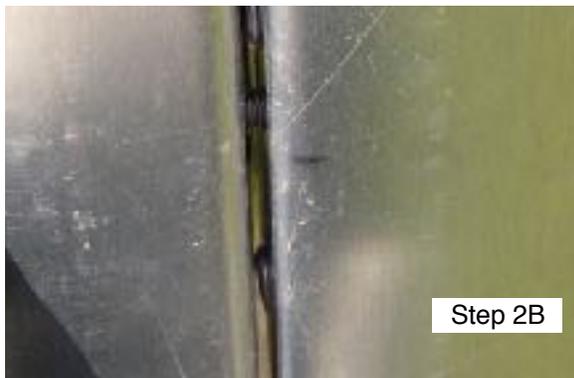

flip the guard upside down and separate the bottom halves by pulling upwards and removing the pin that is inserted into the keyhole (see photo 2A). Slip the EZ OFF around the pole. To align the square pole to the guard simply align the notch for the rope or cable (see photo 2D). Let the guard "sit" on the bracket while you lock the pin into the keyhole located at the bottom of the guard. The pin inserts into the larger hole and slips upwards locking the pin into place. Once locked snap the latch shut.

## To Remove the EZ Off

Open the latch. Your guard is sitting on the bracket. Unlock the pin in the keyhole, this time sliding the pin downward toward the keyhole. Separate the pin from the key hole, remove the tube from the pole. Loosen the wing nut and let the bracket slide down the pole. Lower your rack for nest check. When done raise your rack BEFORE remounting the EZ Off. To re-attach the guard, replace the brackets, make sure it's level and tighten the wing nut. Slip the guard around the pole. Align the notch, place locking pin into the keyhole and lock in place then snap the latch shut.

